

WARNING

DIRECTIONAL

VALVE



To ensure proper valve function, valve must be installed with flow in the direction indicated by the arrow on the valve body.

Swagelok[®]

www.swagelok.com

Printed in U.S.A.
MS-INS-60-VENT
Revision A CP
December, 1998

©1998 Swagelok Company

These instructions are also available in French, Italian, German and Spanish.