

FIRE Series[™]
BALL VALVE

"A60T"

INSTALLATION INSTRUCTIONS

- To assure operation in the event of fire, the arrow on valve must point in the direction of flow (decreasing pressure).
- Valves may be welded into system without disassembly. Valve disassembly will damage flange seals and require their replacement.
- Additional seal kits are available for routine maintenance.



Swagelok[®]

www.swagelok.com

These instructions are also available in
French, Italian, German and Spanish.

© 1983, 1989, 1994, 1997, 2001 Swagelok Company

Printed in U.S.A.
MS-INS-F60INST
CP Revision D
May, 2001