


Swagelok



**Assembly Instructions  
Nylon/PTFE Swagelok® Tube  
Fittings to AN Adapter**

Swagelok—TM Swagelok Company  
© 2004 Swagelok Company  
Printed in U.S.A., CP  
October 2004, R1  
MS-CRD-NYLONAN

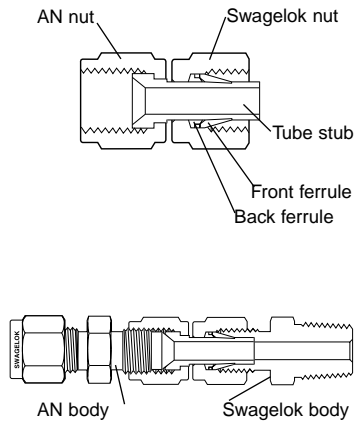

1. Insert the **AN body** through the **AN nut**.
2. Assemble the **AN nut** finger-tight on the flare end of the **AN body**. Tighten the AN nut 1/4 turn past finger-tight with a wrench.
3. Insert the **tube stub** into the Swagelok tube fitting if the nut and ferrules are already assembled, until the tube stub bottoms.  
If the Swagelok tube fitting is not already assembled, insert the **nut**, **back ferrule**, and **front ferrule** onto the **tube stub** in the orientation shown.
4. Tighten the **Swagelok nut** according to standard installation instructions.